

SPARE PARTS MANUAL

WINGET 550 DIESEL TRACTOR

REPRINTED JULY 2002

WINGET LIMITED PO BOX 41 EDGEFOLD INDUSTRIAL ESTATE PLODDER LANE BOLTON LANCS BL4 OLS TEL: ++ 44 (0) 1204 854650 FAX: ++ 44 (0) 1204 854663 service@winget.co.uk parts@winget.co.uk winget.co.uk

INTRODUCTION

This Parts Manual is a re-print of the original manual last published some years ago and has been re-printed in response to requests from enthusiasts who continue to run examples of the Winget 550 and Series 1,2 or 3 of the Model 42 Tractors.


The fact that a particular part number is listed on the following pages does not necessarily indicate that the component is still available.

Reference is made on a number of pages to 'bolt c/w nut and washer', this no longer the case, fixings such as nuts, bolts, screws and washers should be ordered as individual items. A number of Whitworth and B.S.F fixings are now no longer available, in these cases the nearest metric equivalent size will be supplied.


The contents of this manual although believed correct at the time of publication, may be subject to alteration by the manufacturers without notice and Winget Limited can accept no responsibility for any errors or omissions contained within the following pages. Nor can we accept any liability whatsoever arising from the use of this manual howsoever caused.

> WINGET LIMITED PO BOX 41 EDGEFOLD INDUSTRIAL ESTATE PLODDER LANE BOLTON LANCS BL4 OLS TEL ++ 44 (0) 1204 854650 FAX ++ 44 (0) 1204 854663 E mail service@winget.co.uk parts@winget.co.uk www.winget.co.uk

DIESEL TRACTOR

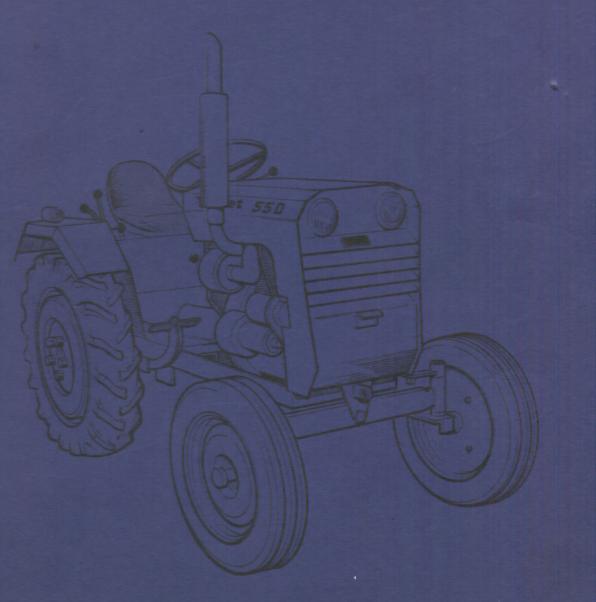


SLATER & ENGLAND LTD., AGRICULTURAL MACHINERY SALES WINGLOS HOUSE, BRISTOL ROAD, GLOUCESTER. TEL. 20228

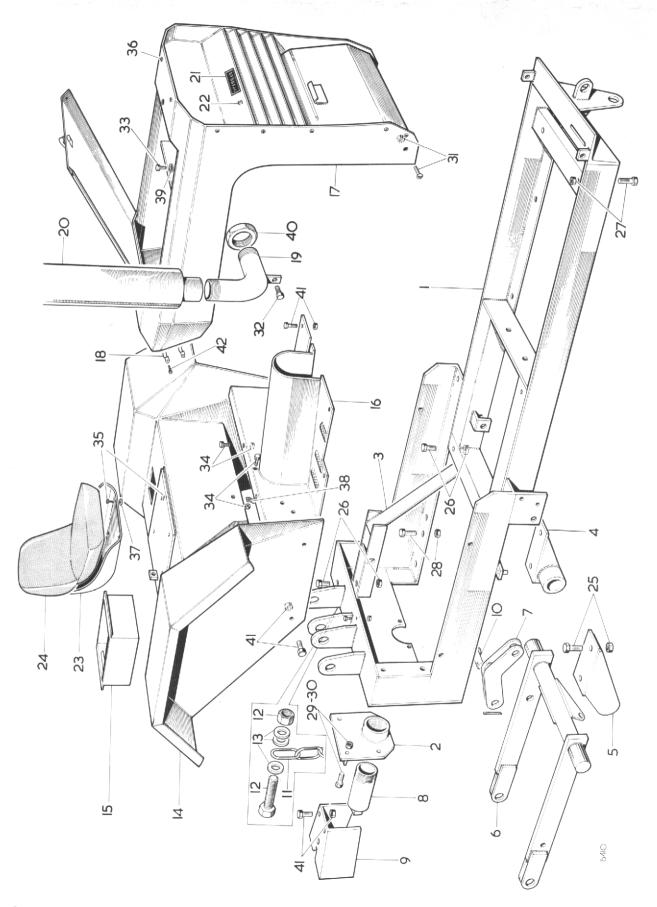


CHASSIS, WING & BONNET

Item No.	Part No.	Description	No. Off
$ \begin{array}{c} 1\\2\\3\\4\\5\\6\\7\\8\\9\\10\\11\\12\\13\\14\\15\\16\\17\\18\\19\\20\\21\\22\\23\\24\end{array} $	Part No. WT.910 WT.208 WT.708 WT.187 LH WT.187 RH WT.823 WT.705 WT.211 WT.226 WT.178-11 WT.226 WT.178-11 WT.562 WT.558 WT.911 WT.908 WT.909 WT.907 WT.907 WT.907 WT.907 WT.971 WT.606 WT.177 WT.580 WT.949	Chassis Gearbox Locating Plate Cylinder Mounting Bracket Cross Shaft Bracket Left Hand Cross Shaft Bracket Right Hand Tool Lift Assembly Cylinder Link P. T. O. Cover P. T. O. Guard Link Pin Check Chain $\frac{1}{2}$ " UNF Bolt x $2\frac{1}{2}$ " and Nut Washer Wing Assembly Tool Box Tunnel and Floor Assembly Bonnet Clip Exhaust Pipe Silencer Name Plate Name Plate Fastener Seat	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
25 26 27 28 29 30 31 32 33 34 35		⁵ / ₈ " UNF Bolt x 1 ¹ / ₂ " and Nut ¹ / ₂ " UNF Bolt x 1 ¹ / ₄ " and Nut ¹ / ₂ " UNF Bolt x 2" and Nut ¹ / ₂ " UNF Bolt x 1 ¹ / ₂ " and Nut ³ / ₈ " UNF Bolt x 1 ¹ / ₄ " ³ / ₈ " UNF Bolt x 1" ³ / ₈ " Mushroom Head Bolt x 1" and Nut ³ / ₈ " UNC x ³ / ₄ " Bolt 5/16" UNF x 1" Bolt ¹ / ₄ " UNF x ¹ / ₂ " Bolt and Nut ¹ / ₄ " UNF x 1" Mushroom Head Bolt	1 3
36		and Nut $5/16"$ UNF x $\frac{3}{8}"$ Mushroom Head Bolt	4
37 38 39 40 41 42	WT.976 WT.975 WT.977	and Nut Washer Clip Washer Back Nut 1¼" B.S.P. ¾" UNF x 1" Bolt and Nut ¼" UNF x ¾" Bolt and Nut	12 4 1 1 10 4

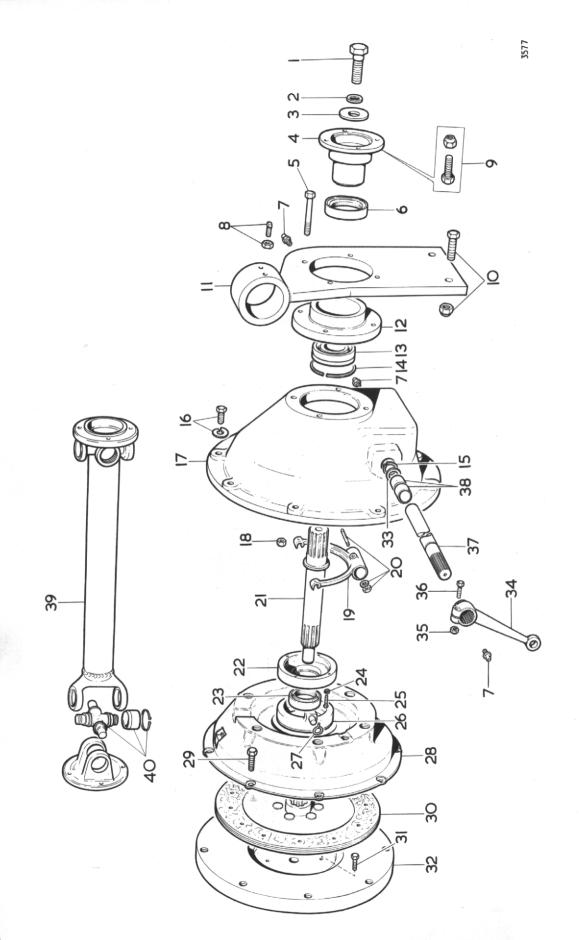

DRIVE UNIT


Item No.	Part No.	Description	No. Off
1	WTD.294	Screw	1
2		Lockwasher	1
2 3 4 5	WTD.293	Flat Washer	1
4	WT.281	Companion Flange	1
5		$\frac{3}{8}$ " UNF x $2\frac{1}{4}$ " Long Bolt Bearing	/
6	WT.282	Housing Oil Seal	4
6	WTD.411	Grease Nipple	1 3 2 4 2
7 8	WID.4II	7/16" Whit Screw and Locknut	2
9		5/16" UNF x 1" Long Bolt and Nut	4
10		$\frac{1}{2}$ " UNF x 2" Long Bolt and Nut	2
11	WT.109	Rear Bearer and Steering Box Brack	et 1
12	WT.103	Bearing Housing	1
13	WTD.401	Input Bearing	1
14	WT.403	Snap Ring	1
15	WTD.286	Circlip	1 8
16	WTD 202	$\frac{3}{8}$ " UNF x 1" Long Bolt	0 1
17 18	WTD.283	Clutch Housing ३" UNF Nut	8
19	WTD.291	Clutch Release Fork	1
20	WTD.292	Cotter, Nut and Washer	1
21	WT.104	Clutch Drive Shaft	1
22	WTD.295	Front Cover	1
23	WTD.296	Oil Seal Input	1
24		Lockwasher	4
25		¹ / ₄ " UNF x 1" Long Bolt	4
26	WTD.278	Clutch Release Bearing	1
27	WTD.277	Spring Retainer	2 1
28	WT.834	Clutch Cover Assembly 5/16" UNF x ¾" Long Bolt	8
29 30	WTD.280	Clutch Drive Plate	4 1 2 1 8 1
31	WID.200	$5/16"$ UNF x $1\frac{1}{4}"$ Long Bolt	4
32	WTD.297	Flywheel	4 1
33	WTD.290	Washer Cross Shaft	
34	WTD.289	Clutch Release Lever	1
35 36 37	WTD.288	Nut Clutch Lever	1
36	WTD.287	Bolt Clutch Lever	1
37	WTD.284	Clutch Cross Shaft	1
38	WTD.285	Bush Clutch Cross Shaft	2
39 40	WT.108 WT.822	Prop Shaft Repair Kit	1 1 2 1 2
40	W 1.022	Kepati Kit	2

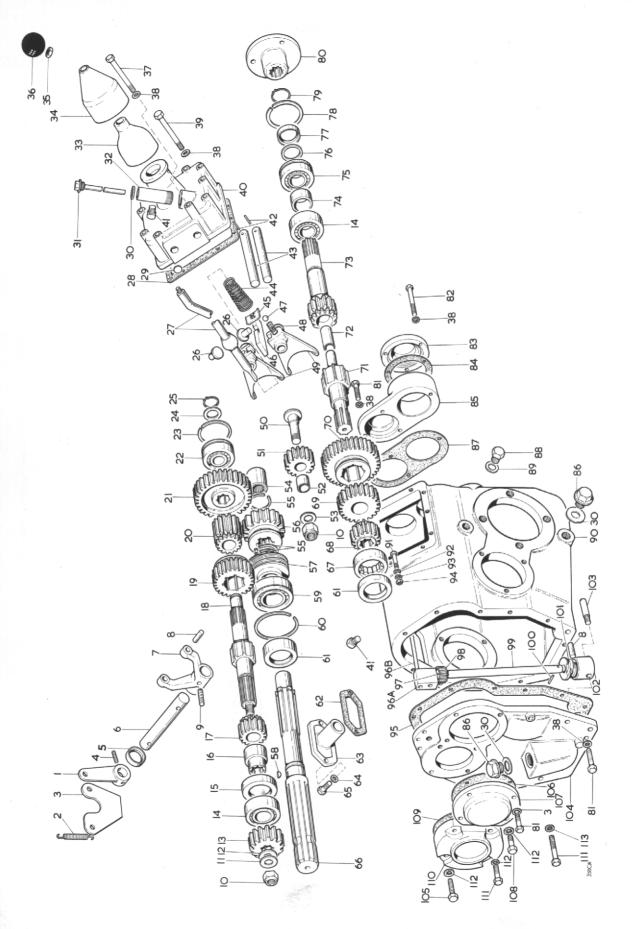

GEARBOX

Item No.	Part No.	Description	No. Oj
$1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 14 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 14 \\ 5 \\ 16 \\ 17 \\ 18 \\ 19 \\ 21 \\ 22 \\ 23 \\ 24 \\ 25 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 23 \\ 24 \\ 25 \\ 27 \\ 28 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 12 \\ 33 \\ 35 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 14 \\ 23 \\ 44 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 0 \\ 10 \\ 10 \\ 10 \\ 10 \\ 10 \\ 10 \\$	WT.914 WT.920 WT.749 WT.407 WT.729 WT.728 WT.728 WT.730 WT.750 WT.794 WT.796 WT.795 WT.795 WT.321 WT.345 WT.345 WT.345 WT.357 WT.324 WT.310 WT.310 WT.310 WT.318 WT.310 WT.314 WT.319 WT.310 WT.314 WT.349 WT.314 WT.349 WT.314 WT.349 WT.340 WT.340 WT.340 WT.366 WT.370 WT.744 WT.404 WT.410 WT.366 WT.404 WT.406 WT.756 WT.406 WT.406 WT.756 WT.406 WT.406 WT.432 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.436 WT.406 WT.406 WT.436 WT.406 WT.306 WT.306 WT.307 WT.306 WT.306 WT.306 WT.306 WT.306 WT.306 WT.307 WT.306 WT.307 WT.307 WT.307 WT.307 WT.307 WT.306 WT.307 WT	P.T.O. Shift Lever Spring P.T.O. Spring Attachment Plate Spirol Pin Oil Seal • P.T.O. Shift Shaft P.T.O. Shifter Fork P.T.O. Shift Pin Spirol Pin Nyloc Nut Washer - Layshaft Fibre Washer - Layshaft P.T.O. Pinion Ball Race Oil Seal - Layshaft Bearing Sleeve Reverse Pinion Layshaft 2nd. Speed Sliding Gear 1st. Speed Pinion Layshaft Wheel Ball Race Snap Ring Spacer - Layshaft Circlip - 17mm External Type Gear Lever Pad Gear Lever Pad Gear Lever Joint for WT 307 Sealing Disc. ¹ / ₂ " B.S.P. Washer Dipstick Filler Tube Gear Lever Cover Steel Cover Locknut (Thin) Knob - Gear Lever Hex. Bolt Shakeproof Washer Hex. Bolt Top Cover Breather Spirol Pin Selector Shaft Gear Lever Spring Spring Plate Baulk Plate ³ " Dia. Ball Selector Fork Reverse Idler Shaft	$1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\$


0f**f**

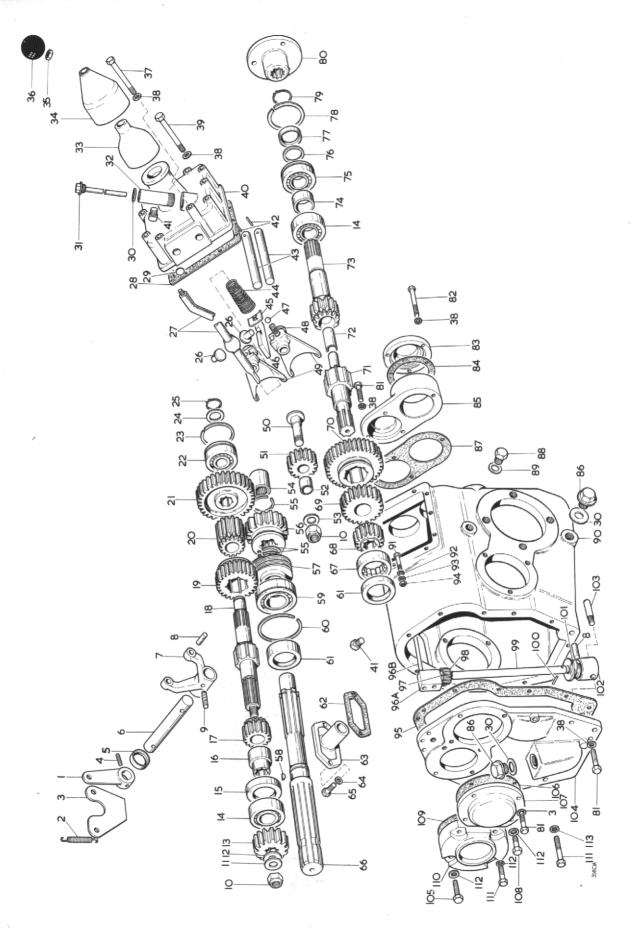

GEARBOX Cont'd

Item No.	Part No.	Description
Item No. 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 970 71 72 73 74 75 76 77 80 81 82 83 84 58 89 90 91 92 94 59 60 90 91 92 94 59 96 96 80 90 91 92 94 59 96 96 80 90 90 90 90 90 90 90 90 90 90 90 90 90	Part No. WT. 320 WT. 355 WT. 439 WT. 353 WT. 395 WT. 727 WT. 738 WT. 748 WT. 401 WT. 403 WT. 358 WT. 720 WT. 731 WT. 757 WT. 426 WT. 312 WT. 312 WT. 314 WT. 316 WT. 315 WT. 317 WT. 309 WT. 354 WT. 309 WT. 354 WT. 309 WT. 354 WT. 308 WT. 335 WT. 346 WT. 334 WT. 356 WT. 347 WT. 326 WT. 332 WT. 419 WT. 412 WT. 306 WT. 305 WT. 419 WT. 424 WT. 306 WT. 305 WT. 419 WT. 424 WT. 305 WT. 417 WT. 301 WT. 429 WT. 758 WT. 797 WT. 369 WT. 740 L. 208	Description Reverse Idler Wrapped Bush Plain Washer Needle Roller Bearing Circlip, 30 mm External P.T.O. Shift Gear Woodruff Key Ball Race Snap Ring Oil Seal (P.T.O. and Worm) P.T.O. Shift Cover Joint P.T.O. Shift Cover Joint P.T.O. Shift Cover Shakeproof Washer Hex. Set Bolt P.T.O. Shaft Roller Race Reverse Wheel 2nd. Speed Wheel 1st. Speed Sliding Gear Main Shaft Wrapped Bush Primary Shaft Spacer - Primary Bearing Ball Race Spacer Primary Shaft Oil Seal - Input Snap Ring for WT.346 Circlip $\frac{7}{8}$ " External Input Coupling Hex. Set Bolt Hex. Bolt End Cover - Input Joint for WT.306 Input Cover $\frac{1}{2}$ " B.S.P. Plug Joint for WT.305 $\frac{1}{2}$ " B.S.P. Plug Washer Axle Casing Bolt Seloc Washer Plain Washer Nyloc Nut Joint for WT.302 Sub Assembly of Top Block and Delivery Tube Top Block
96B 97	L.209 WT.752	Delivery Tube Sel-lock Pin


No. Off

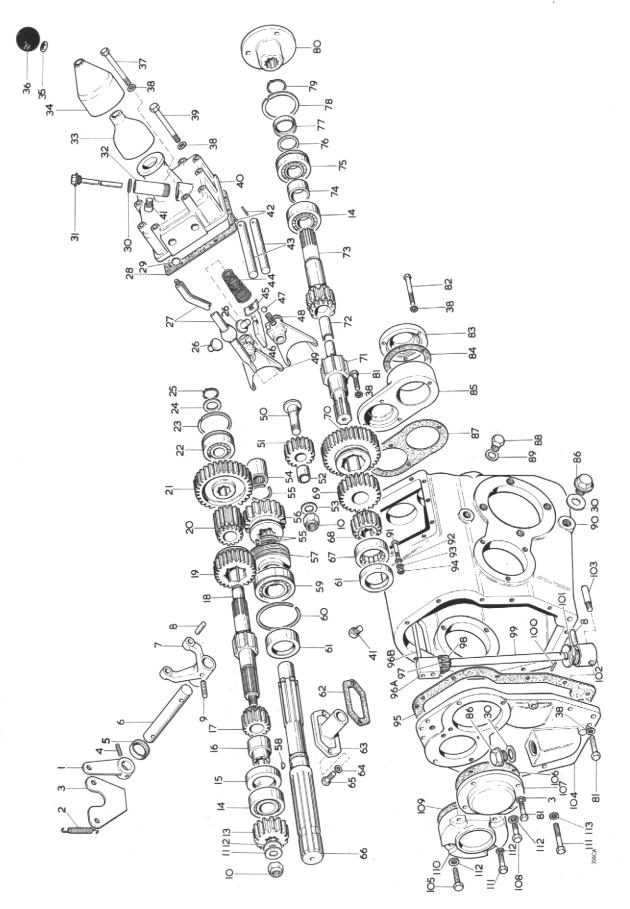

GEARBOX Cont'd


Item No.	Part No.	Description
98 99 100 101 102 103 104 105 106 107 108 109 110 111	WT.737 WT.736 WT.753 WT.735 WT.735 WT.734 WT.742 WT.302 WT.422 WT.372 WT.303 WT.421 WT.371 WT.371 WT.304 WT.420	Drive Pinion Pump Tube Sel-lock Pin Pump Scroll Pump Body [*] Stud Rear Cover Hex. Bolt Joint for WT.303 End Cover - Worm Hex. Bolt Joint for WT.304 P.T.O. End Cover Hex. Bolt
112 113	WT.880 WT.754	Seloc Washer Seloc Washer

No. Off

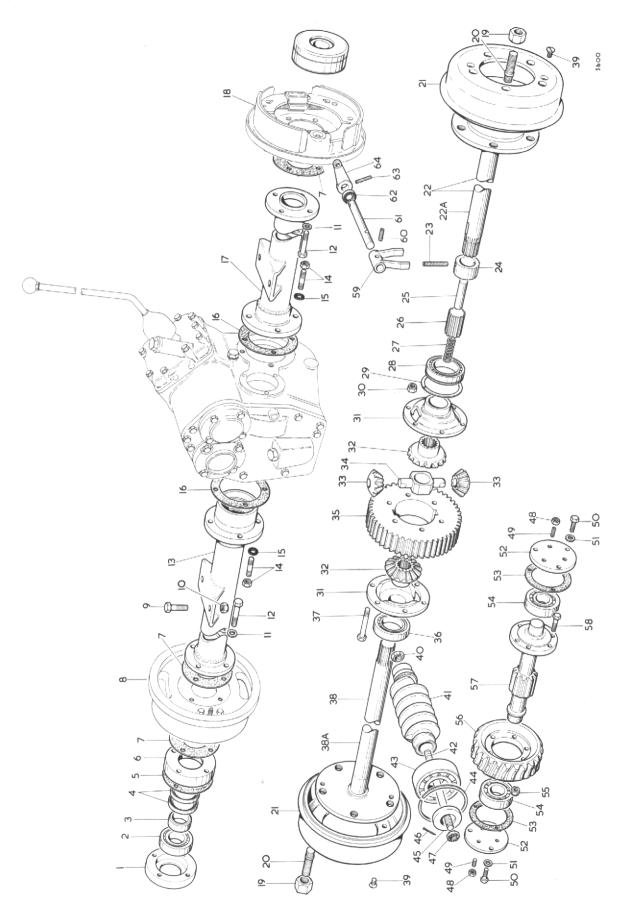


AXLE

Item No.	Part No.	Description	No. Off
1	WT.340	Bearing Housing	2
	WT.348	Ball Race	2
3	WT.339	Locking Ring - Half Shaft	2
4	WT.359	Oil Seal - Axle	4
5	WT.375	Joint for WT.341	2
6	WT.341	Oil Seal Housing	2 2 4 2 2 4
2 3 4 5 6 7 8 9	WT.374	Joint for Brake Plate	
8	WT.378	Brake Assembly Left Hand (see page	
		$1\frac{1}{2}$ " x $\frac{1}{2}$ " UNF High Tensile Bolt	4
10		¹ / ₂ " Locknut	4
11	WT.437	Shakeproof Washer	8
12	WT.427	Hex. Bolt	4 8 1 8 8 2 1
13	WT.360	Half Tube - Nearside	g
14	WT.900	Stud and Nut	g
15 16	WT.751 WT.373	Seloc Washer Joint for WT.360/361	2
17	WT.361	Half Tube - Offside	1
18	WT.377	Brake Assembly Right Hand (see	Ŧ
10	W 1 . U//	page 16)	1
19	WT.267	Wheel Nut (PN 3106)	10
20	WT.381	Wheel Stud	10
21	WT.331 WT.326	Brake Drum	2
22	WT.326	Half Shaft - Right Hand	1
22A	WT.793	Half Shaft - Right Hand (Complete	
		with items 1, 2, and 3)	1
23	WT.418	Spirol Pin	1
24	WT.336	Operating Ring	1
25	WT.813	Push Pin	1
26	WT.388	Sliding Member	1
27	WT.393	Spring - Differential Lock	1
28	WT.391	Ball Race	1
29 30	WT.392 WT.761	Snap Ring	1 6 2 2
31	WT.328	Nyloc Nut Differential Case (Half)	2
32	WT.382	Differential Side Gear	2
33	WT.383	Differential Pinion	
34	WT.329	Spider	2 1
35 36 37 38	WT.327	Final Drive Wheel	1
36	WT.390	Ball Race	1
37	WT.425	Hex. Bolt	6 1
38	WT.325	Half Shaft - Left Hand	1
38A	WT.806	Half Shaft - Left Hand (Complete with	h
		items 1, 2, and 3	1
39	WT.745	Screw - Countersunk Head	4
40	WT.432	Locknut (Thin)	1 1
41	WT.311	Worm Stud Worm	1
42	WT.733 WT.351	Stud - Worm Ball Race	1
40	WT.351 WT.352	Snap Ring	1
42 43 44 45	WT.732	Special Washer	1
		opectur mutifier	-

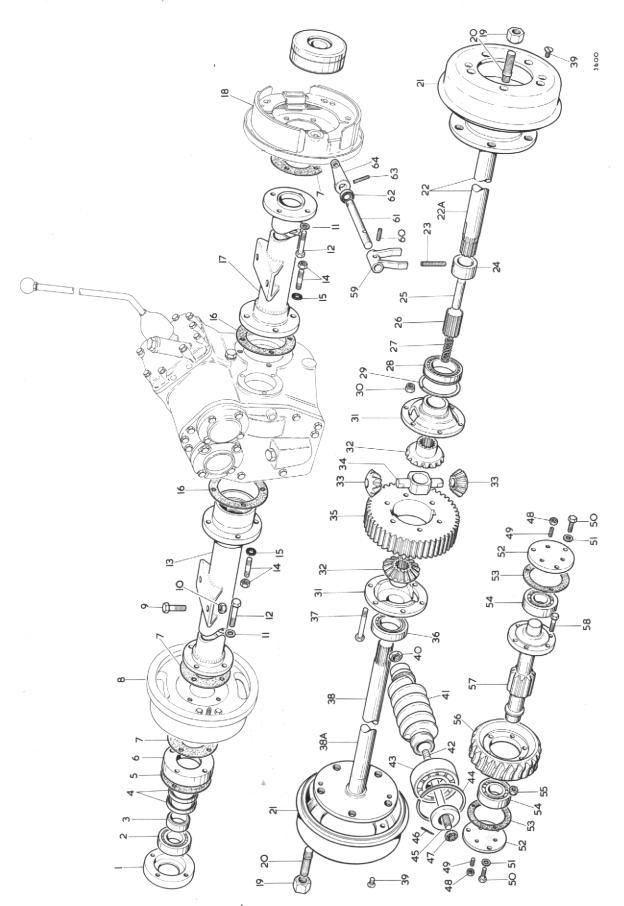


AXLE Cont'd

Item No.	Part No.	Description	No. Off
46 47 48 50 51 52 53 55 55 55 55 55 56 57 8 50 61 62 63 64	WT.747 WT.431 WT.434 WT.430 WT.419 WT.436 WT.379 WT.376 WT.759 WT.323 WT.759 WT.323 WT.313 WT.755 WT.313 WT.755 WT.385 WT.413 WT.414 WT.414 WT.915	Split Pin Slotted Nut Locknut Socket Grub Screw Hex. Set Bolt Shakeproof Washer End Cover Joint - Output Shaft Bearing Nyloc Nut Worm Wheel Output Shaft Bolt Differential Lock Fork Spirol Pin Differential Lock Shaft Oil Seal Spirol Pin Differential Lock Lever	$ \begin{array}{c} 1\\ 1\\ 6\\ 6\\ 6\\ 2\\ 2\\ 2\\ 6\\ 1\\ 1\\ 6\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1 \end{array} $

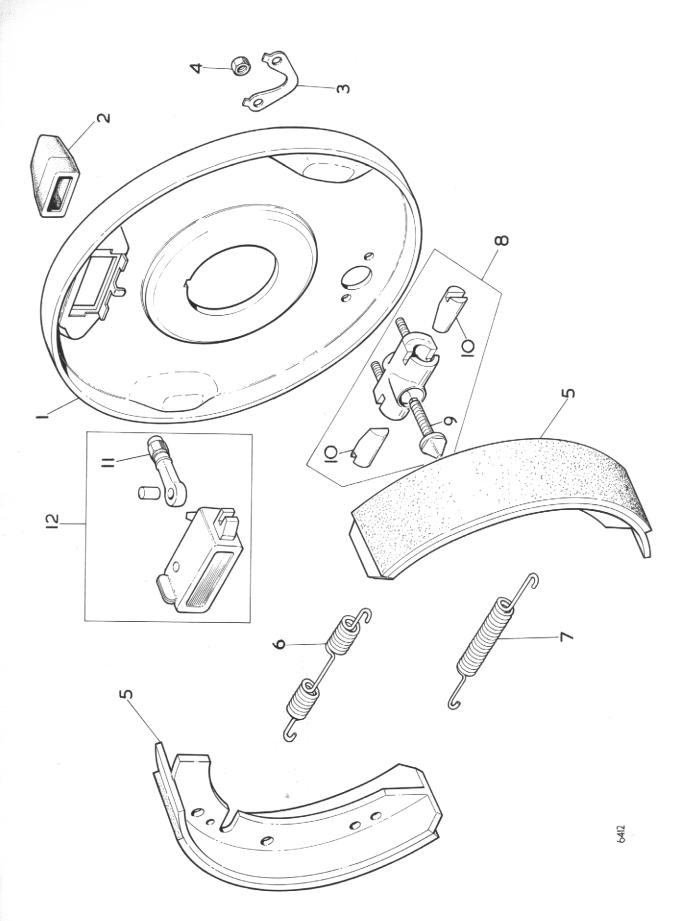


BRAKES

Item No.	Part No.	Description No.	Off
1	WT.534	Backplate Right Hand 1	
1A	WT.535	Backplate Left Hand 1	-
2	WT.537	Boot 2	2
3	WT.541	Locking Tab 2	2
_	WT.539	Nut 4	F
456	WT.540	Brake Shoes 2 pa	irs
Ğ	WT.536	Spring Expander End 2	2
7	WT.538	Spring Adjuster End 2	2
8	WT.542	Adjuster Assembly (including items	
Ũ		9 and 10) 2)
9	WT.766	Adjuster Screw 2	2
10	WT.767	Tappet 4	+
11	WT.544	Pull Rod and Pin 2	2
12	WT.543	Expander Assembly (including item 11) 2	2

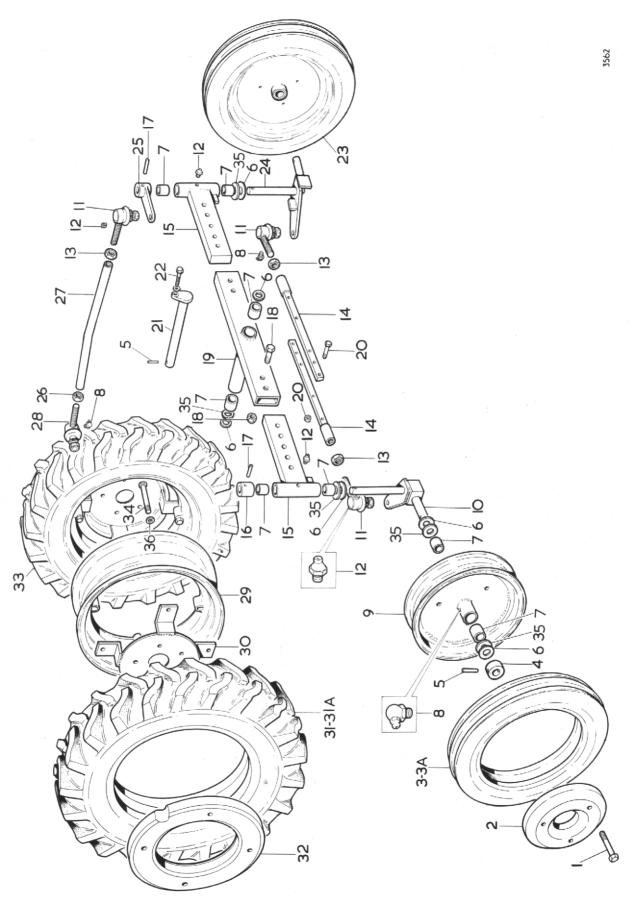


STEERING AXLE & WHEELS

Item No.	Part No.	Description	No. Off
1		$\frac{1}{2}$ " UNF x 3" Long Bolt and Nut	6
2 3 3A	WT.154	Wheel Weight	2
3	WT.609	Tyre (Front)	2 2 2 3 8
3A	WT.610	Tube	2
4	WT.151	Wheel Retaining Cap	2
5	WT.238-4	Retaining Pin	3
6	WT.209	Thrust Bearing	
4 56 78	WT.126	Bearing Bush	10
8	WT.546	Grease Nipple, 90°	4
9	WT.171	Wheel	
10	WT.624 RH	Stub Axle Assembly	1
11	WT.602	Steering Rod Ball End (Right Hand)	3
12	WT.547	Grease Nipple - Straight	4
13		Nut ≟" UNF - (Right Hand)	3
14	WT.160	Track Rod Half	2
15	WT.136	Steering Axle End	2 1 3 4 3 2 2 1
16	WT.148	Stub Axle Collar	1
17	WT.238-2	Retaining Pin	2
18		⁵ / ₈ " UNF x 2" Long Bolt and Nut	4
19	WT.918	Front Axle Assembly	1
20		⅓" UNF x 2" Long Bolt and Nut	2
21	WT.905	Axle Pivot Pin	1
22		$5/16$ " UNF x $\frac{3}{8}$ " Long Bolt	1
23	WT.764	Front Wheel Complete	2
24	WT.624 LH	Stub Axle Assembly	1
25	WT.157	Steering Lever	1
26		Nut $\frac{3}{4}$ " UNF -(Left Hand)	1
27	WT.159A	Drag Link	1
28	WT.603	Steering Rod Ball End (Left Hand)	1
29	WT.169	Wheel Rim	2
30	WT.168	Wheel Centre	2
31	WT.607	Drive Tyre	2
3 1A	WT.608	Tube	2
32	WT.166	Wheel Weight	2
33	WT.765	Rim Complete with Tyre and Tube	2
34		$\frac{1}{2}$ " UNF x 6" Long Bolt and Nut	8
35	WT.903	Thrust Washer	2 2 2 2 2 2 2 8 7 8
36	WT.558	Washer	8

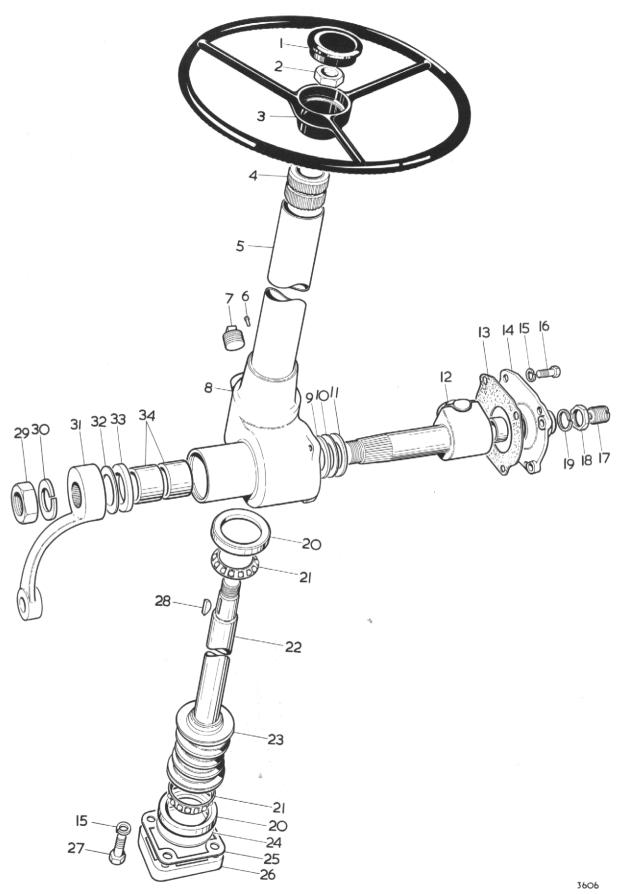


STEERING GEAR

Item No.	Part No.	Description	No. Off
$ \begin{array}{c} 1\\2\\3\\4\\5\\6\\7\\8\\9\\10\\11\\12\\13\\14\\15\\16\\17\\18\\19\\20\\21\\22\\23\\24\\25\\26\\27\\28\\29\\30\\31\\32\\33\\34\end{array} $	WT.970 WTD.502 WTD.501 WTD.522 WT.520 WT.531 WTD.529 WTD.517 WTD.504 WTD.512 WTD.503 WTD.512 WTD.503 WTD.523 WTD.511 WTD.523 WTD.524 WTD.525 WTD.525 WTD.525 WTD.525 WTD.508 WTD.525 WTD.528 WTD.528 WTD.521 WTD.521 WTD.521 WTD.515 WTD.516 WTD.510 WTD.510 WTD.519 WTD.526 WTD.500 WTD.527 WTD.500 WTD.527 WT.694 WT.506 WT.507 WTD.513	Steering Gear Complete Steering Wheel Cap Nut ³ / ₄ " UNF Steering Wheel Bush - Top Column Outer Tube Pin Oil Flug Steering Box Thrust Washer Shim Thrust Washer Rocker Shaft Gasket Cover Plate and Bush Spring Washer Bolt Adjuster Screw Nut Spring Washer Outer Race Cage and Balls Inner Shaft Cam Washer Shim Bottom Cap Bolt Woodruff Key Nut Spring Washer Drop Arm Plug Oil Seal Bush	1 1 1 1 1 1 1 1 1 1 1 1 1 1

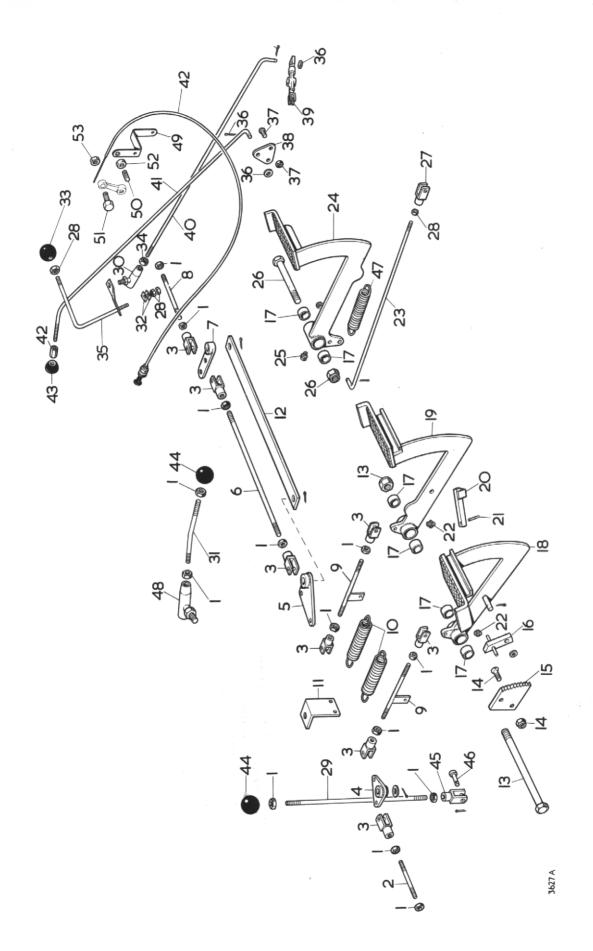


CONTROLS

Item No.	Part No.	Description	No. Off
1 2 3 4 5 6 7 8 9 10 11 12 13 14	WT.210-1 WT.551-1 WT.240 WT.239 WT.210-4 WT.241 WT.210-2 WT.246 WT.246 WT.236 WT.245 WT.244	5/16" UNF Nut Rod, Link Plate to Drum Right Hand 5/16" UNF Clevis Assembly Link Plate Right Hand Link Plate - Intermediate Brake Rod Link Plate - Right Hand Rod, Link Plate to Right Hand Drum Brake Rod - Pedal to Link Plate Return Spring Spring Anchor Strap $\frac{5}{8}$ " UNF x 7" Long Bolt and Nut $\frac{3}{8}$ " UNF countersunk Screw x 1 ¹ / ₄ "	14 1 8 1 1 1 1 1 1 2 1 1 1
$15 \\ 16 \\ 17 \\ 18 \\ 19 \\ 20 \\ 21 \\ 22 \\ 23 \\ 24 \\ 25 \\ 26 \\ 27 \\ 28 \\ 29 \\ 30 \\ 31 \\ 32 \\ 33 \\ 34 \\ 35 \\ 36 \\ 37 \\ 38 \\ 39 \\ 40 $	WT.143 WT.165 WT.137-4 WT.215 WT.137 WT.216 WT.238-1 WT.547 WT.230 WT.139 WT.546 WT.551-2 WT.916 WT.972 WT.929 WT.605 WT.172-1 WT.942 WT.942 WT.927	$\frac{3}{8}$ " UNF Countersunk Screw x $1\frac{1}{4}$ " Long and Nut Parking Brake Quadrant Parking Brake Pawl Bush, Pedal Brake Pedal Right Hand Brake Pedal Left Hand Latch, Brake Pedal Tension Pin Grease Nipple - Straight Clutch Rod Clutch Fedal Grease Nipple 90° $\frac{5}{8}$ " UNF x 6" Long Bolt and Nut Clevis Assembly $\frac{3}{8}$ " UNF $\frac{3}{8}$ " UNF Nut Rod, Differential Lock Ball Joint Rod - P. T. O. Belleville Washer Knob $\frac{3}{8}$ " UNF $\frac{1}{4}$ " UNF Nut Throttle Lever Washer $\frac{1}{4}$ " Dia. 2BA Mushroom Head Bolt x $\frac{1}{2}$ " and Nut Plate , Stop Control Lever, Engine Throttle Throttle Rod	$ \begin{array}{c} 2 \\ 1 \\ $
41 42 43 44 45 46 47 48	WT.960 WT.690-1 WT.172-2 WT.928 WT.962 WT.965 WT.883 WT.983	Rod, Stop Control Control Cable Knob ¼" UNF Knob 5/16" UNF Clevis Clevis Pin Return Spring, Clutch Pedal Ball Joint	1 1 1 1 2 1 1

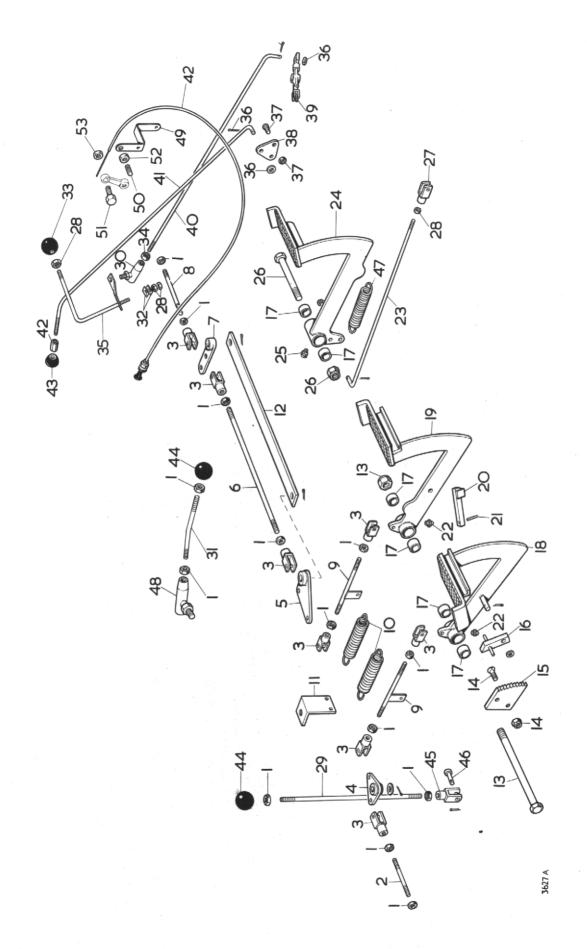


CONTROLS Cont'd

Item No.	Part No.	Description
49 50	WT 681	Bracket
50	WT 682-1	Clamp Screw
51	WT 682-2	Clamp Screw
52	WT 690-3	Hex. Nut $\frac{3}{8}$ " UNF
53	WT 690-2	Hex. Nut $\frac{1}{4}$ " UNF

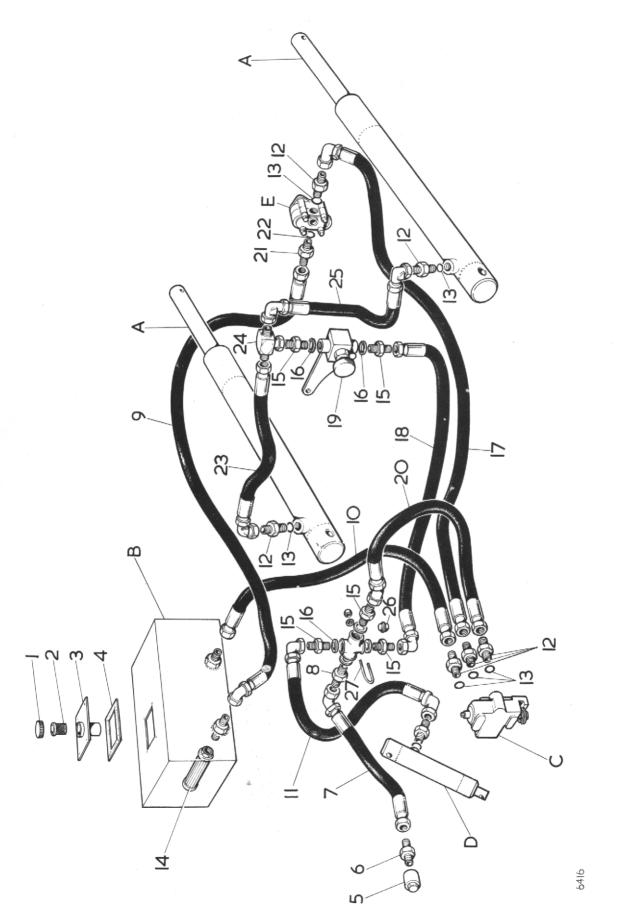

HYDRAULIC HOSE & FITTINGS INCLUDING FRONT LOADER & TRAILER COUPLING

Item No.	Part No.	Description	No. Off
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 A B C D E	WT.8464 WT.8465 WT.8906 WT.8957 WT.8499 WT.8498 WT.8498 WT.8492 WT.8926 WT.8924 WT.8924 WT.8925 WT.8925 WT.8482 WT.8482 WT.8484 WT.8486 WT.8486 WT.8470 WT.9474 WT.9477 WT.8472 WT.8954 WT.8485 WT.9476 WT.9475 WT.8489 WT.8488	Filler Cap Strainer Tank Cover Gasket Dust Cap Coupling Hose $\frac{1}{2}$ " x $15\frac{1}{2}$ " S/90 Adaptor $\frac{1}{2}$ " B.S.P. x $\frac{3}{8}$ " B.S.P. Hose $\frac{1}{2}$ " x 74" S/90 Hose $\frac{3}{8}$ " x 21" S/S Hose $\frac{3}{8}$ " x 20, S.P. x 9/16" J.I.C. 'O' Ring 9/16" Filter Adaptor $\frac{3}{8}$ " B.S.P. x $\frac{3}{8}$ " B.S.P. Bonded Seal $\frac{3}{8}$ " Hose $\frac{3}{8}$ " x 63" S/90 Hose $\frac{3}{8}$ " x 43" S/90 Shut Off Valve Hose $\frac{3}{8}$ " x 25" S/135 Adaptor $\frac{3}{8}$ " B.S.P. x $\frac{3}{4}$ " J.I.C. 'O' Ring $\frac{3}{4}$ " Hose $\frac{3}{8}$ " x 27" S/90 Tee Piece Hose $\frac{3}{8}$ " x 16 $\frac{1}{2}$ " 90/90 Plug 'U' Bolt and Nut Hydraulic Cylinder see page 29 Hydraulic Oil Tank Built into Left Hand Mud Wing Control Valve see page 30 Hydraulic Cylinder see page 28 Hydraulic Pump see page 26	$ \begin{array}{c} 1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\7\\7\\1\\56\\1\\1\\1\\1\\1\\1\\1\\1\\2\\1\end{array} $

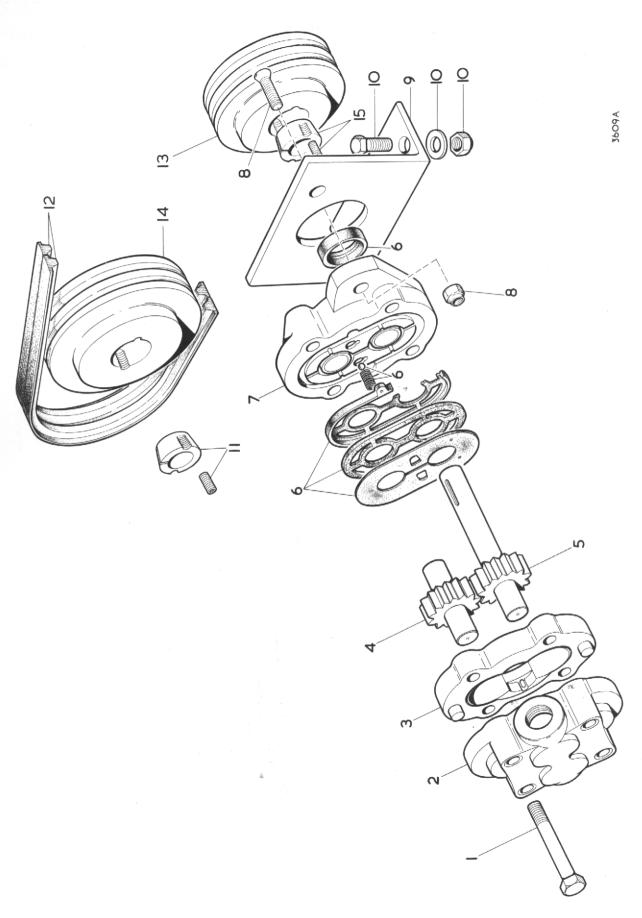


HYDRAULIC PUMP & DRIVE

Item No.	Part No.	Description	No. Off
	WT 8440	Pump Assembly	1
1	WT 8445	Cap Screw	4
2	WT 8446	Back Plate Assembly	1
23	WT 8447	Body and Dowel Assembly	1
4	WT 8444	Idler Gear Assembly	1
5	WT 8443	Drive Gear Assembly	1
456	WT 8448	Seal Repair Kit	1
7	WT 8441	Front Plate Assembly	1
8		Bolt and Nut Pump to Bracket $1\frac{1}{4}$ "	
		Countersunk x ³ / ₈ " UNF	2
9	WT 8193	Pump Mounting Bracket	1
10		Bolt and Nut Bracket to Chassis	
		$1\frac{1}{4}$ " x $\frac{3}{8}$ " UNF	2
11	WT 8986	Taper Bush $1\frac{1}{2}$ " Bore	
12	WT 8985	Belt	2
13	WI Cycy	Pump Pulley	1
14	WT 8988	Engine Pulley	1
15	WT 8987	Taper Bush 9/16" Bore	_
-0			


HYDRAULIC PUMP & DRIVE

Item No.	Part No.	Description	No. Off
	WT 8440	Pump Assembly	1
1	WT 8445	Cap Screw	4
2	WT 8446	Back Plate Assembly	1
2 3	WT 8447	Body and Dowel Assembly	1
	WT 8444	Idler Gear Assembly	1
4 5	WT 8443	Drive Gear Assembly	1
456	WT 8448	Seal Repair Kit	1
7	WT 8441	Front Plate Assembly	1
8	W I 0441	Bolt and Nut Pump to Bracket $1\frac{1}{4}$ "	-
0		Countersunk x $\frac{3}{8}$ " UNF	2
0	WT 8193	Pump Mounting Bracket	1
9	WI 0193	Bolt and Nut Bracket to Chassis	Т
10			2
1.1	WIT 0000	$1\frac{1}{4}$ " x $\frac{3}{8}$ " UNF	2
11	WT 8986	Taper Bush 1½" Bore	0
12	WT 8985	Belt	2
13	0.00	Pump Pulley	1
14	WT 8988	Engine Pulley	T
15	WT 8987	Taper Bush 9/16" Bore	

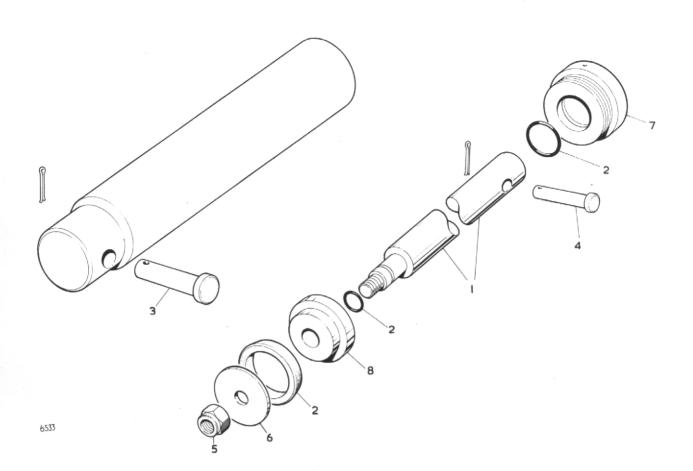


HYDRAULIC CYLINDER - TOOL LIFT

Item No.	Part No.	Description	No. Off
1 2 3 4 5 6 7 8	WT.8701 WT.8768 WT.8769 WT.8178/13 WT.8178/11 WT.8978 WT.8979 WT.9980 WT.9981	Cylinder Complete Piston Rod Seal Repair Kit Upper Mounting Pin Lower Mounting Pin Self Lock Nut Backing Washer Tube Cap Piston Head	1 1 1 1 1 1 1 1 1

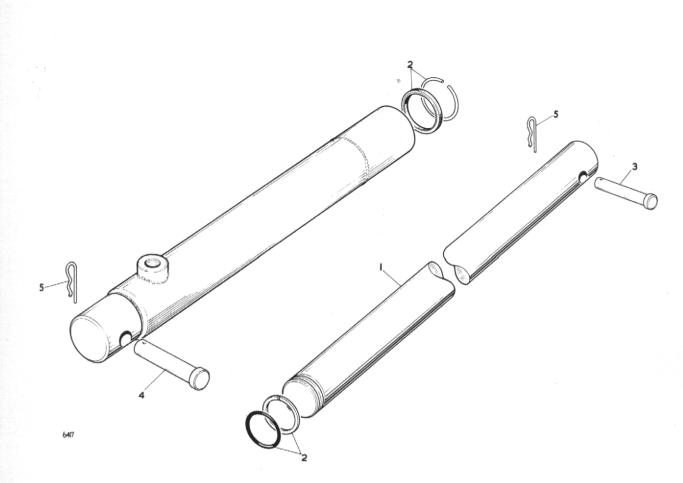

HYDRAULIC CYLINDER - FRONT LOADER

Item No. Part No.	Description	No. Off
WT 9490 1 WT 9491 2 WT 9492 3 WT 9178-3 4 WT 9178-1 5 WT 9266		2 2 2 2 2 2 4

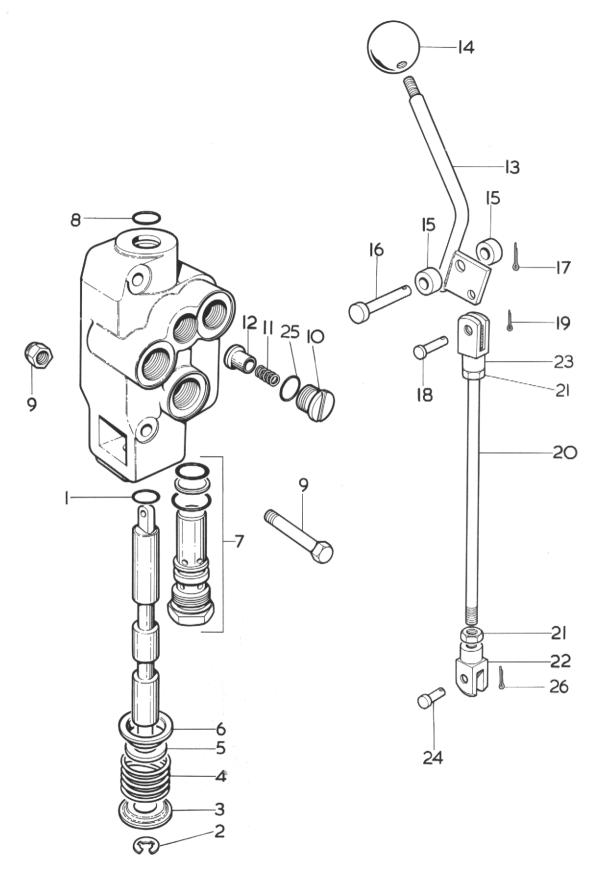


VALVE & LEVER ASSEMBLY

Item No.	Part No.	Description	No. Off
1	WT.8966	Seal	1
2	WT.8969	Circlip	1
3	WT.8451	Washer - Shallow	1
4	WT.8456	Spring - Spool Centre	1
5	WT.8458	Washer - Spool	1
0	WT.8452	Washer - Deep	1
8	WT.8450 WT.8967	Relief Valve	1
2 3 4 5 6 7 8 9	w1.0907	Seal 5/16" UNF Bolt 2½" Long and Nut	1
10	WT.8455	Plug	2 1
11	WT.8454	Spring - Lift Check	1
12	WT.8453	Plunger - Lift Check	1
13	WT.8912	Control Lever	1
14	WT.8172/1	Control Knob	1
15	WT.8189/2	Spacer	2 1
16	WT.8178/4	Lever Pivot Pin	
17	WT OOCE	Split Pin 1/16" Dia. x $\frac{1}{2}$ " Long	1
18	WT.8965	Clevis Pin (Upper)	1
19 20	WT 8020	Split Pin 3/32" Dia. x 5" Long	1
20	WT.8930	Control Rod	1
22	WT.964	Locknut ¼" UNF Clevis (Lower)	2 1
23	WT.961	Clevis (Upper)	1
24	WT.178-5	Clevis Pin (Lower)	1
25	WT.8968	Seal	1
26		Split Fin $3/64'' \ge \frac{1}{2}''$	1
	WT.8460	Seal Repair Kit (Consisting of items 1, 8 and 25)	

	~ v >	Vinget TRACTOR SLATER & ENGLAND LTD., AGRICULTURAL MACHINERY SALES WINGLOS HOUSE, BRISTOL RD., GLOUCESTER-ENGLAND PHONE 20228 RECOMMENDED LUBRICANTS	Winget TRACTOR LAND LTD., AGRICULTURAL MAC , BRISTOL RD., GLOUCESTER-ENGLANI RECOMMENDED LUBRICANTS	HINERY SALES D PHONE 20228	(0, 10)
COM	COMPANY	ENGINE-LISTER SRI	DRIVE AXLE, GEARBOX & STEERING BOX	GREASE POINTS	HYDRAULIC SYSTEM
CASTROL 30°C 0 to 30°C Below 0°C	ABOVE 85°F. 32° to 85°F. Below 32°F.	AGRICASTROL HD 30/1 AGRICASTROL HD 20/1 AGRICASTROL HD 10/1	AGRICASTROL EP AGRICASTROL EP LIGHT CASTROL HYPOY LIGHT	AGRICASTROL MULTI - USE GREASE	HYSPIN 70 OR AW.10 HYSPIN 55 OR AW.5 HYSPIN 45 OR AW.5
B.P. 30°C	Åbove 85°F 32°85°F	VANELLUS SAE 30 TRACTOR OIL UNIVERSAL	GEAR OIL SAE 140 EP	ENERGREASE UNIVERSAL OR	ENERGOL HL 65
Below 0°C	Below 32°F	OR VANELLUS SAE 20W VANELLUS SAE 10W	GEAR OIL SAE 90 EP GEAR OIL SAE 80 EP	ENERGREASE L2	ENERGOL HL 50 ENERGOL HL 40
ESSO 30°C	OVER 80°F	TRACTORLUBE HDX 30 OR	TRACTORLUBE GEAR OIL GP 90/140	ESSO MILI TLAI IRPOSE	NUTO H-54 OR TRACTORLUBE HDX 20
0 to 30°C	32°80°F		TRACTORLUBE GEAR OIL GP 90/140 FSSO GEAR OIL GP 80	GREASE	NUTO H-44 OR TRACTORLUBE HDX 10W NUTO H-36
	BELOW 32"				
MOBIL 30°C	OVER 85°F	DELVAC 1130	MOBILUBE GX 140	MOBIL GREASE	MOBIL DTE OIL LIGHT MOBIL VELOCITE
0 to 30°C	32°—85°F	DELVAC 1120	MOBILUBE GX 90	М.Р.	OIL No. 10 MOBIL VELOCITE
Below 0°C	BELOW 32°F	DELVAC 1110	MOBILUBE GX 80		OIL Ng. 6
30°C 30°C	OVER 85°F	ROTELLA OIL 30 OR 5.30	SPIRAX 140 EP	FARM GREASE UNIVERSAL OR	TELLUS OIL 27
0 to 30°C Below 0°C	30°85°F UNDER 32°F		SPIRAX 90 EP SPIRAX 80 EP	RETINAX A	TELLUS OIL 15 TELLUS OIL 15
		IN THE EVENT OF THE A EQUIVALENT OILS SUPPLIED BY A	EVENT OF THE ABOVE OILS NOT BEING AVAILABLE SUPPLIED BY A REPUTABLE MANUFACTURER MAY BE USED	ILABLE RMAY BE USED	


MATCHED IMPLEMENTS

AND OPTIONAL EXTRAS

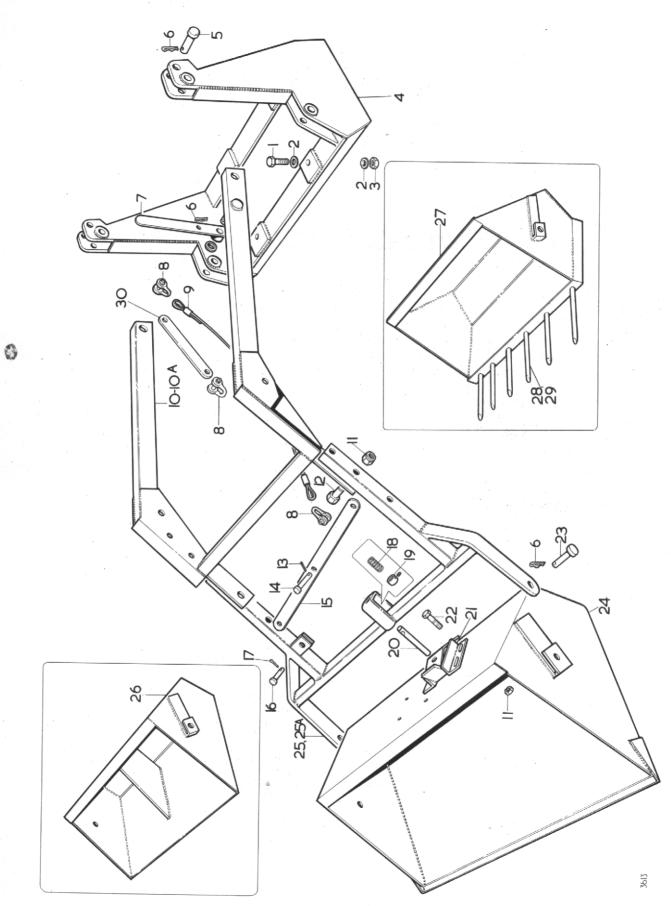

FRONT END LOADER

Item No.	Part No.	Description N	o. Off
Item No. 1 2 3 4 5 6 7 8 9 10 10A 11 12 13 14 15 16 17 18	Part No. WT.9102 WT.9178-13 WT.9266 WT.9628 WT.9563 WT.9272 WT.9184 WT.9178-4 WT.9178-4 WT.9271 WT.9178/7 WT.9273-1	DescriptionN $\frac{5}{8}$ " UNF x $1\frac{3}{4}$ " Hex. Bolt $\frac{5}{8}$ " UNF Self LocknutLoader Attachment FramePinRound Spring CotterLever - Bucket ControlShackleControl Wire - Bucket ReleaseBoom - LoaderExtended Bom $\frac{3}{8}$ " UNF Hex. Self Locknut $\frac{3}{8}$ " UNF X $2\frac{1}{2}$ " Long Hex. Bolt1/16" Dia. x $\frac{5}{8}$ " Long Split FinClevis PinPlunger Release ArmPin $\frac{1}{8}$ " Dia. x $\frac{3}{4}$ " Long Split PinSpring	4 8 4 1 2 5 1 2 1 1 1 8 4 1 1 1 1 1 1 1
17	WT.9273-1 WT.9564	$\frac{1}{8}$ " Dia. x $\frac{3}{4}$ " Long Split Pin Spring Collar and Grub Screw	1 1 1
20 21 22 23 24	WT.9270 WT.9550 WT.9178/1	Pin - Plunger Bracket ¾" UNF x 1" Hex. Bolt ¾" Dia. Pin	1 1 4 2 1
24 25 25A 26 27 28 29	WT.9549 WT.9268 WT.9596 WT.9593 WT.9598 WT.9804	Bucket 4 cu. ft.) Boom Arms - Standard Boom Arms - (9 cu. ft.) Bucket Only Bucket (9 cu. ft.) Manure Fork Fork Nut ³ / ₄ " B.S.W.	1 1 1 1 6 6
30	WT.982	Control Wire Extension with item 8 for item 10A	1

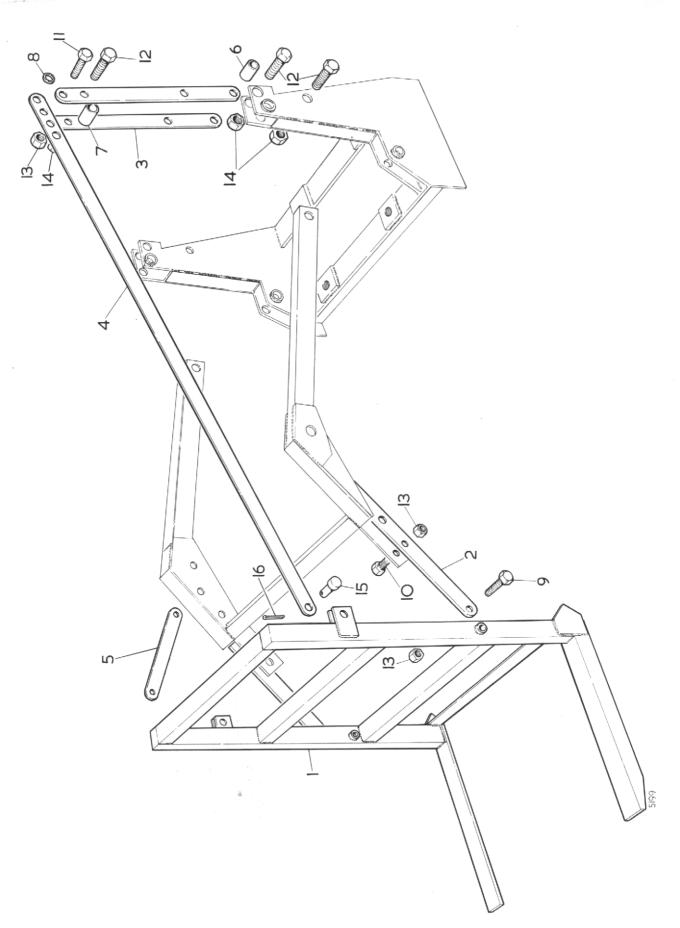

Appendix 2

FRONT PARALLEL PALLET LIFT

Item No.	Part No.	Description	No. Off
1	Y 507	Lift Frame	1
2	Y 502	Boom Attachment Arm	2
3	Y 501	Tie Bar Anchor Arm	4
4	Y 509	Tie Bar (Long) Parallel Lift	2
4	Y 508	Tie Bar (Short) Rigid Lift	2
6	Y 503	Spacing Tube 1. ⁷ / ₈ " Long	2
7	Y 504	Spacing Tube 2. ¹ / ₄ " Long	2
8	WT 206	Spacer	4
9		$\frac{1}{2}$ " UNF x 3. $\frac{1}{4}$ " Long Bolt	2
10		$\frac{1}{2}$ " UNF x 1. $\frac{1}{2}$ " Long Bolt	4
11		$\frac{1}{2}$ " UNF x 3. $\frac{1}{2}$ " Long Bolt	2
12		$\frac{3}{8}$ " UNF x 3. $\frac{1}{2}$ " Long Bolt	6
13		Selflocknut ½" UNF	8
14		Selflocknut $\frac{3}{8}$ " UNF	6
15	WT 178	Clevis Pin	2
16	•	1/16" x 1" Split Pin	2

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm